

WARRANTY

Arlec guarantees this product in accordance with the Australian Consumer Law.

Arlec also warrants to the original first purchaser of this product ("you") from a retailer that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

ARLEC

Arlec Australia Pty. Ltd. ACN 009 322 105 ("Arlec") gives the Warranty. Arlec's telephone number, address and email address are:

Customer Service: (03) 9982 5111

New Zealand Toll Free: 0800 003 329

Building 3, 31 – 41 Joseph Street, Blackburn North, Victoria, 3130
Blackburn North LPO, P.O. Box 1065, Blackburn North, 3130

Email: custservice@arlec.com.au

CPIN002509/2

45cm

ARLEC

AFF003

HIGH VELOCITY

60W FAN

OPERATING INSTRUCTIONS




SAFETY INSTRUCTIONS

- **DO NOT** use this unit for functions other than those described in this instruction manual.
- **DO NOT** tilt the unit. Always keep in upright. Position on a flat and stable surface, where it cannot be easily knocked over. Take extra care when operating
- **DO NOT** connect the unit unless it completely assembled.
- **DO NOT** use the unit in a wet room, such as a bathroom or laundry or handle with wet hands.
- **DO NOT** use the unit in the presence of inflammable substances or vapour such as alcohol, insecticides, petrol etc.
- **DO NOT** use the mains plug to start and stop the unit.
- **DO NOT** pull the supply cord or

IMPORTANT! PLEASE READ THESE INSTRUCTIONS CAREFULLY.

IDENTIFICATION

1. Pedestal pole
2. Base
3. Pedestal pole screw cap
4. Pedestal pole fixing screws
5. Support pole
6. Speed control box
7. Height adjustment fastening knob
8. Front grille
9. Fan blade
10. Rear grille
11. Carry handle
12. Motor housing
13. Oscillation switch
14. Table fan stand
15. Wall mounting hook

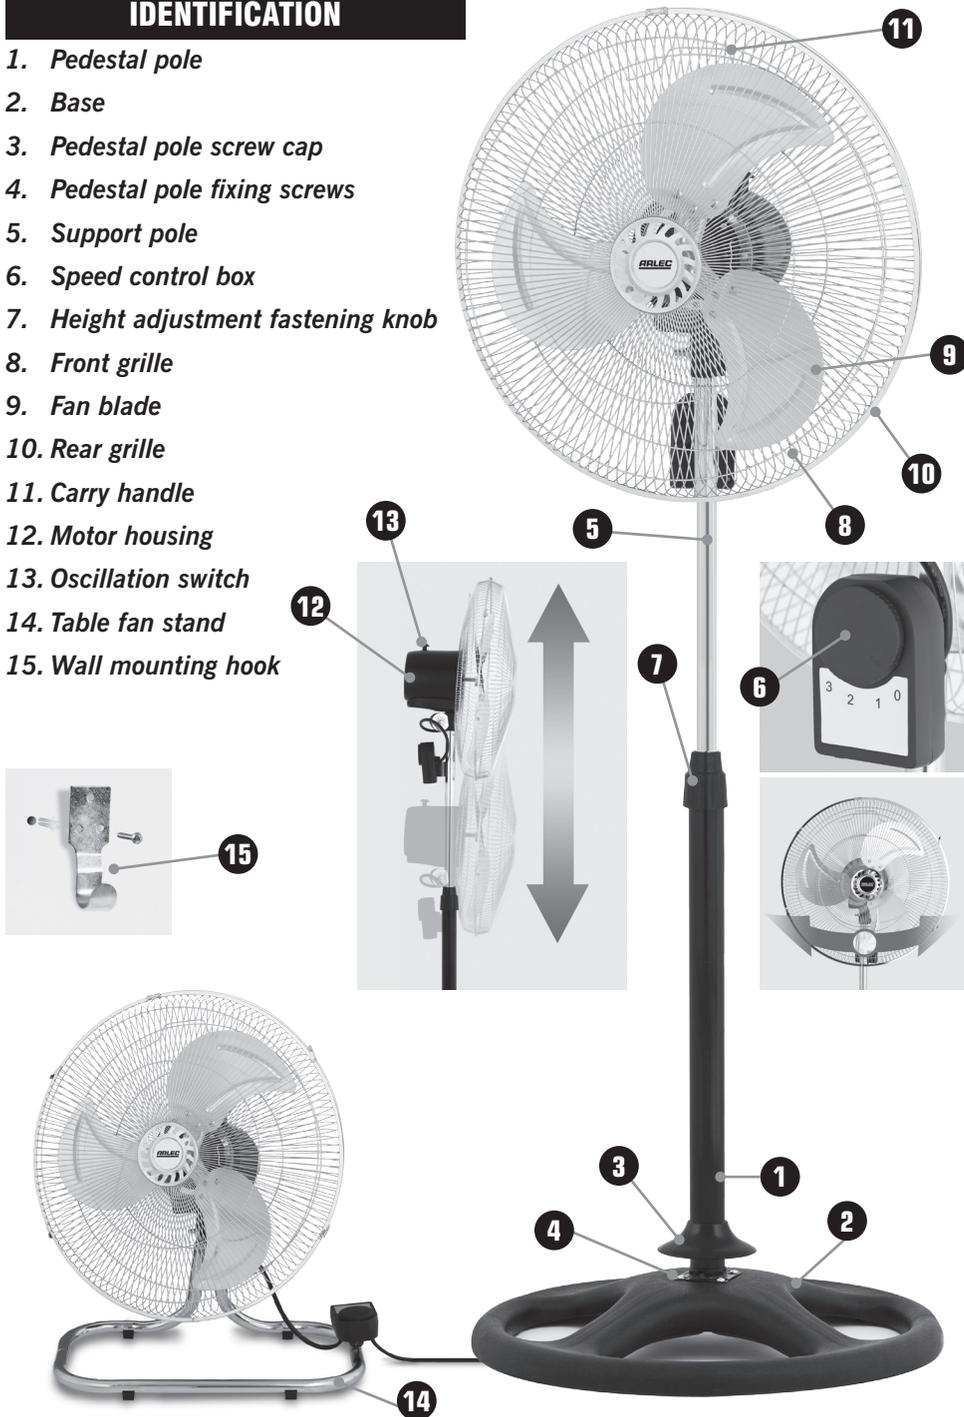

2

SAFETY INSTRUCTIONS

- place it near a heat source. Always unwind the cord completely to avoid overheating.
- If the supply cord is damaged it must be replaced by the service agent or a similarly qualified person, in order to avoid a hazard.
- **DO NOT** insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or user.
- **DO NOT** allow children to play with this appliance. This appliance is not intended for use by children or infirm persons without supervision.
- **DO NOT** conduct repairs on this unit. It has been built in accordance with relevant safety and performance standards. An electrical specialist must carry out all repairs.
- This unit is intended for indoor use only.
- **ALWAYS** unplug the unit from the mains before maintenance or cleaning.
- **ALWAYS** use the switch on the control panel to start and stop the unit.
- **ALWAYS** keep a clearance of at least 200mm from walls furniture and curtains
- **ALWAYS** turn off and unplug the unit when not in use.
- Use the unit in the recommended

ENERGY SAVING TIPS

- room size of up to 20m². (assuming standard 2.4m ceiling height)
- Do not locate the fan where furniture or other objects can obstruct the air flow.
- Keep blinds/curtains closed during the sunniest part of the day
- Close the fireplace damper, floor and/or wall registers, so cool air does not escape through the chimney or duct work.

The fan can be assembled in three

ASSEMBLY

different ways- Floor standing; wall mounted or as a table fan. Remove all the subassemblies required to assemble the fan from the box.

FLOOR STANDING:

1. Attach the base to the pedestal pole using 4 machine screws and nut supplied in a separate poly bag. (Figure 1).
2. Unscrew the height adjustment

Figure 1



3

Figure 2



fastening knob from the pedestal pole and pull it out. Insert the pedestal pole screw cap and push it down towards the base of the fan to cover the screw heads used to attach the pedestal pole to the base. (Figure 2).

3. Before putting back the height adjustment fastening knob extend the support pole to desired height, the support pole will be held tightly inside the pedestal pole. If necessary, use a pair of pliers to grasp the support pole and pull it into position. (Figure 3).

4. Insert the height adjustment fastening knob and lock the assembly by turning it anticlockwise. (Figure 3).

5. Insert the motor housing over the support pole and tighten the screw

Figure 3



attached to the motor housing to secure the assembly. (Figure 4)

6. Unscrew the rear grille fixing screws attached to the motor face housing. (Figure 5).



Figure 4

4



Figure 5

Place the rear grille in position, ensuring the screw holes align as shown in the figure. If this is done correctly, the carry handle on the rear grille will be at the top. Put back the screws and secure the assembly. (Figure 6).

7. Attach the fan blade over the shaft and tighten the screw attached to the fan blade. While doing so make sure the screws sits against the flat surface of the shaft and not on the curved shaft surface. (Figure 6).

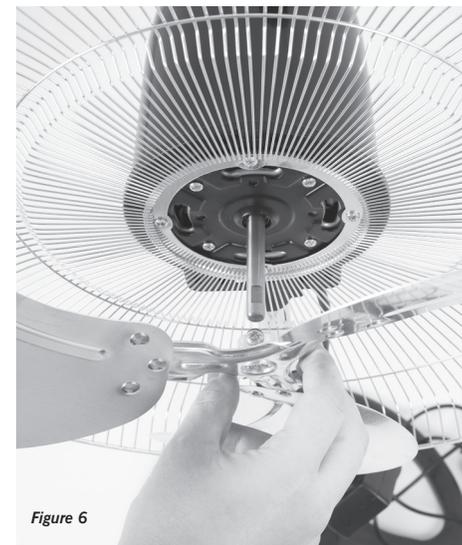


Figure 6

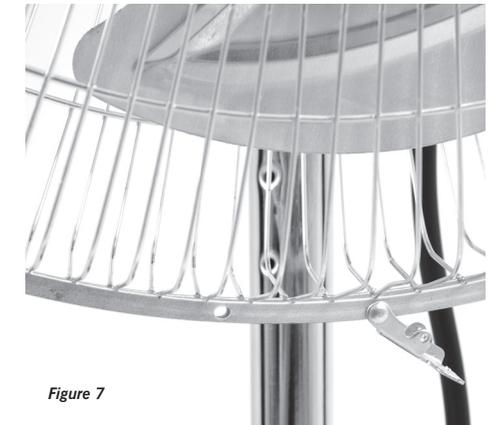


Figure 7

8. Attach the front grille; unscrew the small screw and nut attached to the front grille. Lift the grille locking clips attached to the rear grille, align the screw hole on the rear and the front grille and secure it by fastenings the locking clips over the outer trim. (Figure 7). Put the screw and nut back on to the grille for additional safety.

9. Attach the speed control switch box to the support pole using two 10mm long machine screws supplied separately in a poly bag. (Figure 8).



Figure 8

5

TABLE FAN ASSEMBLY

1. For using the fan as a table fan remove the sub assemblies for the stand and assemble the stand as shown in (Figure 9).

Figure 9



2. Attach the motor housing to the stand. Remove the bolt and the nut attached to motor housing and attach the motor housing to the

Figure 10



stand as shown in (Figure 10).

3. Follow steps 6-8 from the floor standing assembly instruction for attaching the grille and the fan blades.
4. Attach the switch control box to stand, 2 mounting holes are provided on the stand to attach the switch

Figure 11




WALL MOUNTING

control box (Figure 11).

1. The fan assembly wall mounting is same as the table fan assembly. The stand is attached to the wall mounted hooks.
2. Two wall mounting hooks are supplied with the kit. Select a mounting position. Hold the hook in place and mark the screw location. The two brackets must be 197mm apart as shown in Figure 12. Drill holes and attach the hook to the wall using 6 screws and wall plugs supplied with the unit. (3 screws and wall plugs per hook) Care should be taken to avoid drilling or screwing into concealed electric wiring.
3. Hang the fan stand to the hooks (Figure 12). Adjust the fan head by loosening the nut attached to the stand. Tighten the nut once the



Figure 12

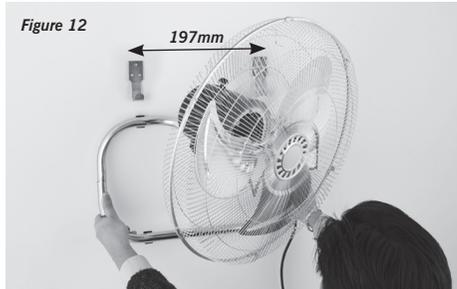

OPERATION

desired angle is achieved. The fan is now ready to use.

1. Make sure you read all the safety warning before first time use.
2. Plug the cord to a mains socket and turn on the mains switch.
3. The speed control switch box allows three speed settings "1-2-3", "0" is the off position.
4. Press the desired speed setting button and the fan will run continuously at selected speed.
5. Press the oscillation switch located at top of the motor housing and the motor will move side to side.

CARE AND MAINTENANCE

Pull the switch up and the fan will stop oscillating.

1. Always disconnect the cord from the electrical outlet when cleaning your fan.
2. Light accumulated dust may be removed from the fan with a soft cloth or vacuum cleaner using the dusting brush attachment.
3. To remove the front grille unscrews the screw located at the bottom of the front grille, pull the 4 grille locking clips up (away from the grille) and slide the front grille out.
4. Clean the dust accumulated on the fan blades using a soft cloth or vacuum cleaner using the dusting brush attachment.
5. Attach the front grille, align the screw hole on the front and the rear grille and press the locking clips against the grille to lock them in. Put back the screw and nut.

Never operate the unit without the front grille assembled.

4. Wipe the exterior surfaces of the fan occasionally with a cloth moistened (not dripping wet) with a mild soap solution. Dry the fan thoroughly with a soft dry cloth before operating the fan. Speed control box is not of weather proof construction so make sure you do not spill any water over the switch box while cleaning the unit.
5. Avoid the use of gasoline, benzene, thinner etc as they may result in damage to the fan.
6. Store the fan in a clean dry place when not in use.

WARNING: DO NOT IMMERSE THE FAN IN WATER OR ALLOW WATER TO DRIP INTO THE INTERIOR OF THE FAN HOUSING AS THIS COULD

TECHNICAL SPECIFICATIONS

CREATE A FIRE OR ELECTRIC SHOCK HAZARD.

Model No:	AFF003
Rated Voltage:	220-240Vac
Rated Frequency:	50Hz
Power:	60W
Current:	0.32A