

USER MANUAL

MAINTENANCE & CLEANING

1. Before cleaning, turn off the heater, unplug the power cord and allow the heater to cool.
2. Do not immerse cord, plug or heater into water or other liquid or pour water or other liquid over the heater.
3. Use a vacuum cleaner to remove dust and dirt from air openings.
4. Clean exterior surfaces using a solution of water and mild detergent with wrung out damp sponge. Use and wring out the damp sponge and wipe the exterior surface again.
5. Finally wipe with a dry cloth. Allow sufficient time to dry before plugging electrical cord into outlet.
6. The tempered glass front panel can be clean with glass cleaner detergents.
7. Any other servicing should be performed by an authorised service representative.
8. Do not use the heater if it has malfunctioned or become damaged in any way.

WARRANTY

Arlec guarantees this product in accordance with the Australian Consumer Law.

Arlec also warrants to the original first purchaser of this product ("you") from a retailer that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

TECHNICAL SPECIFICATIONS

Model	EFH211
Max Heating Power	2000W max
Rated Frequency	50Hz
Rated Voltage	220-240V ~
Bulb Wattage	25W/bulb (2 bulbs)
Bulb Size & Type	E14 candle

ARLEC

For all Sales & Warranty enquiries

Arlec Australia Pty. Ltd. ACN 009 322 105
("Arlec") gives the Warranty.

Building 3, 31 – 41 Joseph Street, Blackburn North, Victoria, 3130
Blackburn North LPO, P.O. Box 1065, Blackburn North, 3130

Customer Service: (03) 9982 5111
Email: custservice@arlec.com.au

CPIN002602

ARLEC

USER MANUAL

FOR PERSONAL INDOOR USE ONLY

2000W FIREPLACE HEATER WITH REALISTIC FLAME EFFECT



EFH211

Samie

WARNING!

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK,
OR PERSONAL INJURY, READ, UNDERSTAND
AND FOLLOW INSTRUCTIONS BEFORE
USING THIS HEATER**

KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS


1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible material such as drapery and other furnishings, at least 1 metre from the heater. When in use keep the mains cord of the heater from touching the heater body. Do not drape the cord over the heater while hot.. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating unattended.
3. Always unplug heater when not in use.
4. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to suitably qualified facility for examination, electrical or mechanical adjustment or repair.
5. Do not use outdoors, the product is designed only for household use.
6. Never locate heater where it may fall into a bathtub or other water container.
7. Do not run cord under carpeting. Do not cover cord with throw rugs runners, or the like. Keep cord away from traffic areas to avoid tripping over.
8. To disconnect heater, turn controls to off, then remove plug from outlet.
9. Connect to properly earthed socket-outlet of the appropriate voltage.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, do not block the grilles in any manner.
12. Do not use in areas where petrol, paint, or flammable liquids are used or stored.
13. Use the heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury.
14. Do not connect via double adapters or power boards. Avoid the use of an extension cord because the extension cord may overheat and cause risk of fire. However, if this heater is used with an extension cord, use as short a cord as practical.
15. Do not use this appliance with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
16. In order to avoid overheating, do not cover the heater.
17. There are no user serviceable parts installed in this heater.
18. For additional protection, the use of Residual Current Device (RCD) with a tripping current not exceeding 30ma is recommended.
19. Keep these instructions handy for future reference.

CAUTION

- **This heater is to be operated only in upright position.**
- **When the heater is not in use, store in a cool dry location.**
- **Do not store until the heater cools down.**

WARNING

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young Children should be supervised to ensure that they do not play with the appliance.
- The heater must not be located immediately below a power outlet.
- Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.
- This appliance is heavy; two people are recommended for lifting

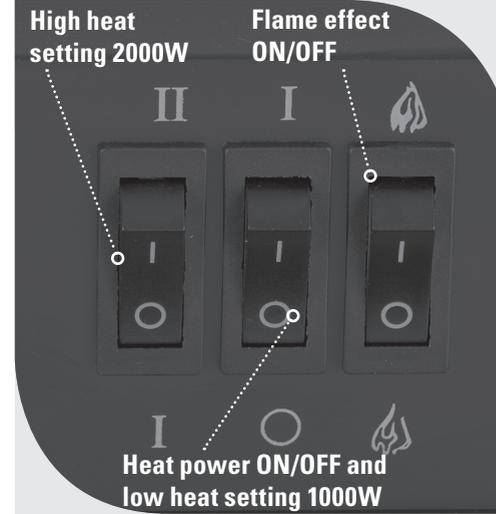

OPERATING INSTRUCTIONS

1. Find a spot and place the fireplace heater in position. The appliance is heavy; two people are recommended for lifting. Make sure you have at least 200mm from back wall and the mains cord is not squashed in any manner.
2. Unpack the pebbles from the bag and place them along the flame effect log in the desired position.
3. Plug to heater to a standard 10 ampere socket. The heater is now ready for use.
4. For realistic flame effect press the fame effect switch  to position marked 'I' on the switch. To turn off the fame turn the switch back to position '0'.
5. For low heat setting (1000W) press the low heat setting switch to position marked 'I'. To turn on the heat setting to high heat (2000W) press the high heat setting button to position marked 'II'. To turn off the heater press the high setting button to position marked 'I' and low heat setting button to position marked '0'. Low heat setting must be ON to set the heater on high heat setting 2000W (I + II).

SAFETY CUT-OFF

1. This appliance is fitted with a safety cut-off which will operate if the heater overheats(eg. due to blocked air vents). For safety reasons, the heater will NOT automatically reset.


2. To reset the appliance, disconnect the appliance from the mains supply for at least 30 minutes. Reconnect the supply to the mains and switch on the appliance.

REPLACING THE FLAME EFFECT LAMP

Warning – Always disconnect from the power supply before removing bulb.

Warning – The bulbs reach high temperatures during operation. Allow the bulbs to cool down after switching off the appliance before changing lamps.

1. To replace the bulb locate the four screws on the rear of the unit.
2. Unscrew the screws and lift the lamp replacement bracket out.

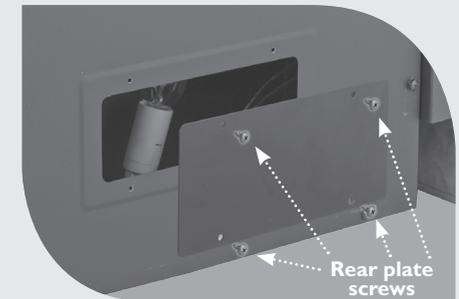

3. Unscrew the globes by turning them anticlockwise and pull them out. Replace the existing globes with globes of same wattage 25W E14 candle shape. Secure the new globes by turning them clockwise.



4. To reassemble , put the lamp replacement bracket to the rear plate and secure it with the four screws .