

## WARANTEE

Arlec guarantees this product in accordance with the Australian Consumer Law.

Arlec also warrants to the original first purchaser of this product ("you") from a retailer that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty. The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## ARLEC

Arlec Australia Pty. Ltd. ACN 009 322 105  
("Arlec") gives the Warranty.

Arlec's telephone number, address and email address are:

Customer Service: (03) 9982 5111

Building 3, 31 – 41 Joseph Street, Blackburn North, Victoria, 3130

Blackburn North LPO, P.O. Box 1065, Blackburn North, 3130

Email: [custservice@arlec.com.au](mailto:custservice@arlec.com.au)

© This instruction leaflet is subject to copyright and must not be reproduced, copied or otherwise used in any way or for any purpose without the consent in writing of the owner, Arlec Australia Pty Ltd (A.C.N. 009 322 105).

# ARLEC

## Rechargeable Double Vision Searchlight

RT2000  
Series 2

### Instruction Manual



**Important! Please read these instructions carefully before use.**

**Due to continuous research and development the specifications herein are subject to change without notice.**

## INTRODUCTION

The Arlec Rechargeable Double Vision Searchlight is a rechargeable torch with a Quartz Halogen globe providing intense white light, plus a smaller standard bulb. Each is individually selectable.

## BEFORE USE, CHARGE THE BATTERY

Plug the AC adaptor charger into the charger socket on the torch by first lifting up the rubber socket cover. Plug the adaptor into power outlet and switch mains power on. The time to fully charge the battery is approx. 10 hours.

**NOTE:** Both the switches on the torch must be in the 'OFF' position for charging the battery.


On full charge the main lantern of the torch will operate for approx. 30 minutes before needing a recharge. The small lantern will operate for 8 hours. To conserve battery life, use the smaller light whenever the main searchlight lantern is not required.

**IMPORTANT:** Do not store with flat battery. Recharge regularly. If the battery is flattened charge immediately. DO NOT CHARGE FOR A PERIOD IN EXCESS OF 24 HOURS.

After charging close the rubber socket cover.

## TO USE

The torch can be operated with the handle in the normal position or in "pistol" grip position. This is achieved by pressing in the release button on the handle and rotating it to the desired position.

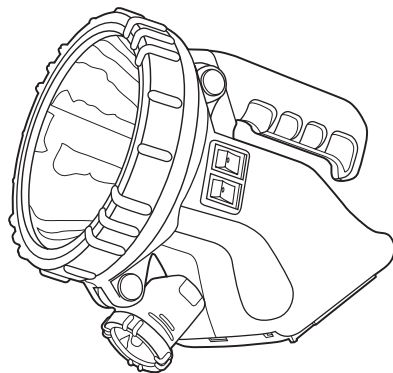

Normal Position

The torch can be simply stood on its base to allow hands free use.

Switch on by operating the switches at the side of the torch as indicated.


Make sure that both switches are switched off while charging as the charger will not function if either is switched on.

## WARNINGS

- Lens becomes very hot during operation. This torch is designed for intermittent use only. Continuous use is specifically not recommended and may cause damage to the unit.
- Never cover lens and reflector during operation.
- Do not shine directly into eyes.
- Switch off the torch and allow to cool before storage or maintenance.
- Replace the globe or battery with same rating and type only.
- Use only the chargers supplied with the lantern.


## MAIN GLOBE REPLACEMENT

1. Remove the front of the torch by turning anticlockwise.
2. Lift out the reflector assembly and remove the spring wire clip from the rear of the reflector. Globe will now come away from reflector.
3. Disconnect the globe wire by pulling straight out on the connecting wire. Hold by the connecting lugs while doing so, not by the wire.

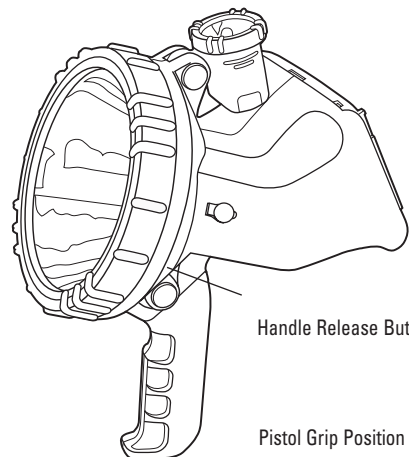

Handle Release Button

 Pistol Grip Position

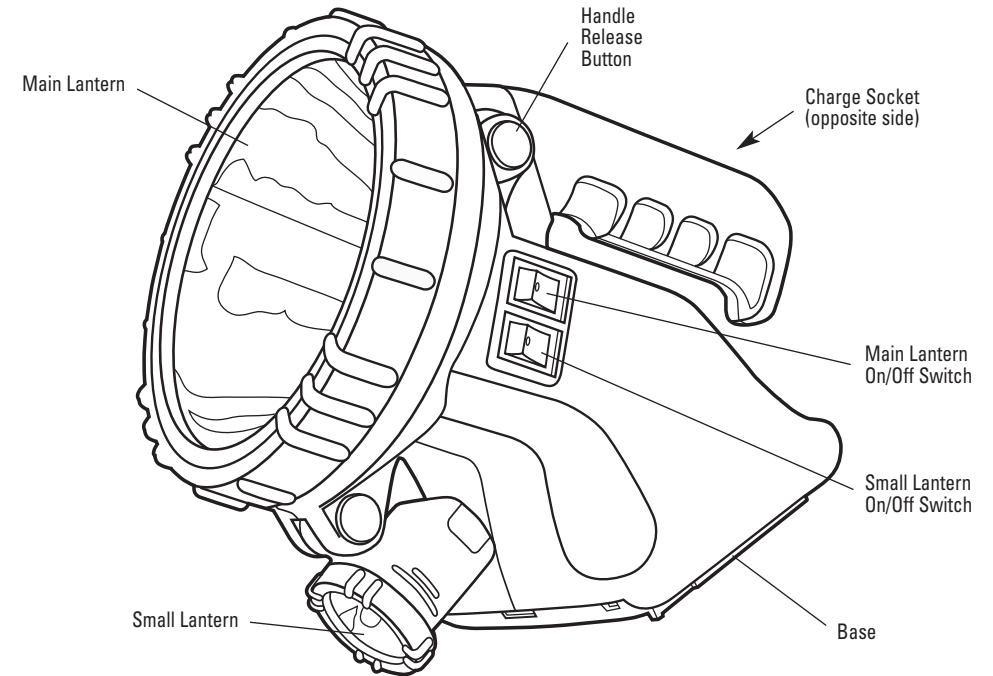

4. Replace the globe, reconnect the wire, fit spring wire clip and refit reflector assembly. Avoid handling the new globe by the glass envelope. Replace globe only with an identical type.

## SMALL GLOBE REPLACEMENT

1. Remove front lens by turning anticlockwise, remove reflector.
2. Unscrew bulb from holder, pull out.
3. Replace bulb, refit reflector and front lens.

## CAR CHARGER

A cigarette lighter charger is provided. It works in much the same way as the AC adaptor, but allows you to charge the torch from your vehicle. The charger connection cord and plug are stored in a compartment in the base of the lantern. Slide the tabs on the base to open the compartment

**NOTE:** Normally cigarette lighter outlets in vehicles will only be energised if the key is in the ignition and turned at least to the "ACC" position.

## USER HINTS

- Do not store with flat battery. Always recharge unit before storing.
- Do not store or operate the unit under extreme temperature and/or high humidity.
- Keep unit away from direct sunlight.
- Clean the unit with a damp cloth with soap detergents only, do not use corrosive or abrasive cleaners.
- Do not overcharge (keep charging time less than 24 hours).
- This unit is weather resistant, but ensure it is kept from heavy rain or becoming immersed.

## IMPORTANT

- If the unit is to be kept in storage for any reason, charge before storing and recharge every 3-4 months to maintain battery life.
- Do not leave the lantern switched on when battery is flat. Switch off and recharge immediately.