

# Cutting Template

Centre Hole

117.5mm

E200 Fan Size

## INSTALLATION INSTRUCTIONS

### Warnings

- 1 Electrical wiring is to be carried out by a licensed electrical contractor.
- 2 Before cutting a hole in the ceiling, check that there are no ceiling joists, etc. or electrical wiring above the desired mounting location.
- 3 The fan must be installed so that the blades are more than 2.1 metres above the floor.
- 4 A minimum of 500mm clear space above the fan is necessary.
- 5 If ducting is used it should be of a diameter larger than the fan blade.
- 6 Do not install the fan in canopies over stoves, etc. as excessive heat will damage the unit.
- 7 The supply cord of this fan cannot be replaced. If cord is damaged, discard the unit.
- 8 The fan is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they do not play with this fan.

- 9 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- 10 Children should be supervised to ensure that they don't play with the appliance.

### Installation Instructions

- 1 Using the template printed below, insert a nail (or similar) through the centre hole and position it at the centre of the desired location.
- 2 Insert a pencil through the other hole. Mark the circle and cut out the hole. Finished hole size should be **235mm** diameter
- 3 Ensure that a 3 pin power socket is installed in the ceiling close to the mounting hole.

- 4 Remove the grille from the fan by pulling apart where indicated. Discard foam packing material located between fan grille and blade.
- 5 Hold the fan close to the hole and plug the power lead into a power socket.
- 6 Position the fan assembly into the hole and tighten the three screws (3 clamps will swing out behind the ceiling) until the fan is held firmly in place. Do not overtighten screws. Alternatively, wood screws can be used in the four holes provided.
- 7 Check that the electrical cord is clear of the fan blades and blades are free to rotate. Replace the grille by pressing over the flange until it snaps into place. The fan is now ready for use.
- 8 Ensure that the fan is switched off from the supply mains before removing the guard.

### Cleaning Instructions

The front grille must be removed and cleaned periodically, otherwise the build up of grease, dust and lint etc will substantially reduce efficiency.

- 1 Remove the grille by pulling where indicated, then wash in warm detergent water. The use of a small brush will also assist.  
**THE GRILLE IS NOT SUITABLE FOR CLEANING IN A DISHWASHER. DO NOT USE SOLVENTS SUCH AS PAINT THINNERS ETC.**
- 2 Wipe the surfaces of the fan blade with a cloth soaked in warm soapy water.
- 3 Replace the grille by snapping it in place. **DO NOT IMMERSE THE MOTOR IN ANY LIQUID AS DAMAGE AND FAILURE WILL RESULT.**