

click®**click®**

PRODUCT WARRANTY

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store, (see www.bunnings.com.au for store locations) or contact Arlec Australia Pty Ltd. Arlec bears reasonable, direct, expenses of claiming under the warranty. You may submit details and proof to Arlec for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by

Arlec Australia Pty. Ltd. ACN 009 322 105

Customer Service: (03) 9982 5111

New Zealand Toll Free: 0800 003 329

Building 3, 31 – 41 Joseph Street,
Blackburn North, Victoria, 3130

Blackburn North LPO,

P.O. Box 1065, Blackburn North, 3130

Email: custservice@arlec.com.au

200MM EXHAUST FAN

30 WATT MOTOR

EXC200



Instruction Manual

INSTALLATION INSTRUCTIONS:

WARNINGS:

1. Electrical wiring is to be carried out by a licensed electrical contractor.
2. Before cutting a hole in the ceiling, check that there are no ceiling joists, wiring or pipes above the desired mounting location.
3. The fan must be installed so that the blades are more than 2.1 metres above the floor.
4. A minimum of 500mm clear space above the fan is necessary.
5. If ducting is used it should be of a diameter larger than the fan blade. Duct length if more than 1 metre will affect the fans performance. Care must be taken in order to avoid any water ingress on the exhaust fan from the duct.
6. Do not install the fan in canopies over stoves, etc. as excessive heat will damage the unit.
7. The supply cord of this fan cannot be replaced. If cord is damaged, discard the unit.
8. The fan is not intended for use by young children or infirm persons without supervision.
9. Precautions must be taken to avoid the back-flow of gasses onto the room from the open flue of gas or other fuel –burning appliances.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they don't play with the appliance.
12. DO NOT attempt to modify or repair the appliance yourself –there are no user serviceable parts.

INSTALLATION:

CAUTION: ANY ELECTRICAL WIRING IS TO BE CARRIED OUT BY A LICENSED ELECTRICAL CONTRACTOR.

DO NOT INSTALL IN AN AREA WHERE WATER MAY BE SPLASHED ON THE APPLIANCE.



1. Using the cutting template provided, insert a nail (or similar) through the centre hole and position it at the centre of the desired location.
2. Insert a pencil through the other hole. Mark the circle and cut out the hole. The provided cardboard template will mark out a 245mm diameter circle for the 200mm fan.
3. Ensure that a 3 pin power socket is installed in the ceiling close to the mounting hole.
4. Remove the grille from the fan by pulling apart where indicated.
5. Hold the fan close to the hole and plug power lead into a power socket.
6. Position the fan assembly into the hole and tighten the three screws (3 clamps will swing out behind the ceiling) until the fan is held firmly in place. Do not overtighten screws.
For ceilings more than 13mm thick use wood screws (not supplied) to secure the fan to the ceiling. Locate screws in the 4 holes in the outlet lip of the fan frame.
7. Check that the electrical cord is clear of the fan blades and blades are free to rotate.
8. Replace the grille by pressing over the flange until it snaps into place. The fan is now ready for use.
9. Ensure that the fan is switched off from the supply mains before removing the guard.

CLEANING INSTRUCTIONS

The front grille must be removed and cleaned periodically, otherwise the buildup of grease, dust and lint etc will substantially reduce efficiency. Switch off the appliance before attempting to remove the grille.

1. Remove the grille by pulling where indicated, then wash in warm detergent water. The use of a small brush will also assist.
THE GRILLE IS NOT SUITABLE FOR CLEANING IN A DISHWASHER. DO NOT USE SOLVENTS SUCH AS PAINT THINNERS ETC.
2. Wipe the surfaces of the fan blade with a cloth soaked in warm soapy water.
3. Replace the grille by snapping it in place.
DO NOT IMMERSE THE MOTOR IN ANY LIQUID AS DAMAGE AND FAILURE WILL RESULT.

Technical Specifications:

Rated Voltage:	220-240Vac
Rated Frequency:	50Hz
Wattage:	30Watts