

ARLEC

Solar LED Festive Lights with Steady & Flashing Function

INSTALLATION INSTRUCTIONS

IMPORTANT!

Please read these instructions carefully. Keep these instructions in a safe place for future reference.

The Arlec Solar LED Festive Lights provide self contained LED festive lighting. Power to operate the LED's is derived from batteries charged using the solar panel located on the top of the main unit. The Festive LED lighting can be used to decorate trees and shrubs or highlight roof lines and eaves for festive occasions.

INSTALLATION

NOTE: Batteries may require solar charging prior to operation. To charge, leave unit in a sunny location with solar panel exposed to sunlight.

1. Unpack Solar Panel unit, stake and LED lights from carton.
2. Press the ON/OFF button to turn unit on
3. To check operation of the unit, cover the solar panel with a dark cloth.
4. Place stake in ground in desired location
5. Unravel LED string into desired configuration.
6. Mount solar panel onto stake provided

NOTE: The unit must be located in a position so as to achieve exposure to the greatest possible amount of sunlight to assist in adequate charging.

The Lights

The globes are non replaceable LED type but have been manufactured to last for long life. If globes do not light up at first turn on please return to place of purchase.

Operation

The lights will automatically turn on in the night when the ON/OFF button located underside of the solar panel is pressed to ON position. The solar panel will charge the batteries during daytime and the amount of charge may vary depending upon the sun load. The run time of the lights depends upon the charge of the batteries which may vary from 0-6Hrs

Handling and Installing LED Lights

When unpacking the string of globes, avoid tangling by gradually uncoiling the lights set

1. Check that all LED's in your lighting set are operating before installation.
2. Handle strings of lights with care; do not allow heavy contact of light or battery with hard surfaces.

WARNING. ALWAYS UNWIND CORD BEFORE USE

3. String of lights can be held in position using small plastic cable ties on tree branches (not included in kit)
4. String of lights can be wound around posts or trees or hung in windows or under eaves, but should be secured at each end.
5. Ensure the Lights and Solar Panel are not positioned where they can be inadvertently damaged by doors, moving objects, people or animals.
6. Take care if using ladders for installation. Ensure that you have a stable footing and do not over reach.

Controller

The controller button allows 2 modes of operation.

Mode 1: Steady operation mode

Mode 2: Flash mode

Press the mode button, located next to the ON/OFF button on the underside of the solar panel, to switch between these 2 modes of operation.

Battery Replacement

Should the lights start to dull or stay on for shorter lengths of time we recommend that the rechargeable battery should be replaced as given below:

1. Remove the 4 screws on the back of the solar panel and remove the back cover taking care not to damage any wires.
2. Replace the used battery with a new one making sure the polarity is correct.
3. Replace cover and secure with the existing 4 screws.

NOTE: The battery should only be replaced with a rechargeable "AA" size NiMH or Li-ion battery of the same capacity as the original one supplied with the unit.

Warranty

Arlec guarantees this product in accordance with the Australian Consumer Law.

Arlec also warrants to the original first purchaser of this product ("you") from a retailer that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

ARLEC

Arlec Australia Pty. Ltd. ACN 009 322 105 ("Arlec") gives the Warranty.

Arlec's telephone number, address and email address are:

Customer Service: (03) 9982 5111

Building 3, 31 – 41 Joseph Street, Blackburn North, Victoria, 3130
Blackburn North LPO, P.O. Box 1065, Blackburn North, 3130

Email: custservice@arlec.com.au

© This instruction leaflet is subject to copyright and must not be reproduced, copied or otherwise used in any way or for any purpose without the consent in writing of the owner, Arlec Australia Pty Ltd (A.C.N. 009 322 105).

CPIN002072/3