



Easy Etch Engraver

Operating Instructions and User Hints


1. Ensure the engraving bit is well secured in the Easy Etch Engraver, plug the adaptor into a regular household powerpoint and turn the power 'ON'.
2. Holding the Easy Etch Engraver as you would a pen, apply pressure to the feather touch switch with the forefinger to operate it.
3. Best results are obtained by applying a minimal amount of pressure and keeping the rotation speed of the Easy Etch Engraver high. Note: Do not apply excessive force when engraving.
4. To change the engraving bit, first ensure the power is 'OFF' and the plug is removed from the power point. Then replace the old bit by grasping it with pliers and pulling it straight out.
5. Insert the new bit ensuring it is well secured.

Police Notice: Australian Police Force recommend that owner's valuables be engraved with their drivers licence number, prefixed by the first letter of the state of residence (eg. V 2682 365 0). This will enable faster identification of stolen goods.

Note: The Easy Etch Engraver RE 111, is supplied with a steel bit ideal for engraving metal, plastic and wood. The replacement bit is accessory no. ET 669. For engraving on glass ceramics or hardened metal we recommend a diamond bit, accessory no. ET 688.

© This packaging is subject to copyright and must not be reproduced, copied or otherwise used in any way or for any purpose without the consent in writing of the owner, Arlec Australia Pty Ltd (A.C.N. 009 322 105).

CPCD 370/3 Made in China

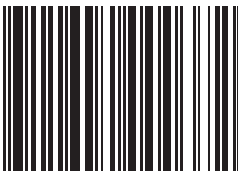

9 311644 000372

