

**ARLEC**

# RECHARGEABLE 5W CREE LED SPOTLIGHT

RT0510



## INSTRUCTION MANUAL

**IMPORTANT!** Please read these instructions carefully before use.

The 5W CREE LED Rechargeable torch is ideal for normal household use, as well as for outdoor use. It features a powerful 5W LED white light for long range, multiple LEDs for short range and an emergency flashing beacon. Powered from a high capacity 4V 4Ah Sealed lead acid battery, the torch will provide a long operating time.

### BEFORE USE:

1. **Ensure the torch is switched off before charging, otherwise it will not charge properly.**
2. Plug the AC adaptor charger into the charging socket by first lifting the rubber socket cover. Plug adaptor into power and switch on.
3. Red LED should illuminate to indicate that the unit is charging.
4. When the unit is fully charged, Green LED will illuminate. Switch off the AC adaptor charger and unplug from lantern.
5. Place the adaptor in a suitable location for future use.

The batteries full charge time is approximately 10 -12 hours. **NEVER charge in excess of 24 hours.** The torch will operate for approximately

4 hours under long range setting and 12 hours under short range setting before needing a recharge.

### CAUTION:

**Always recharge the torch prior to storage. Store in a cool area with low humidity. Recharge at least every 3-4 months even if not used in that period to ensure the battery functions as intended in the future.**

### USE OF TORCH:

The torch can be operated in most weather conditions, however the torch is not completely waterproof. Do not immerse in water or other liquid. Excessive use in extreme weather conditions may cause failure. Never charge under wet conditions. Do not allow the charger or battery to become wet.

The torch features an adjustable ratchet stand that can be used to tilt your desired lighting direction. Use the rubber grip as a handle to adjust the ratchet.



The rechargeable torch is switched on/off by rotating the switch knob on the side of the unit.

#### **OPERATION:**

##### **Torch**

1. Rotate the knob clockwise to switch to short range setting.
2. Rotate the knob clockwise again to switch to long range setting.
3. To turn off, simply switch the knob back to its original position.

##### **Beacon**

1. Press the push button once to illuminate the flashing emergency beacon, located next to the charging socket.
2. Press again to turn the flash beacon off.

#### **WARNINGS:**

- Do not operate the unit under extreme temperatures and/or high humidity. Keep away from direct sunlight.
- Replacing the battery requires a screwdriver, ensure it is performed by

someone who is comfortable with changing the battery. Only open torch lid if battery needs replacement. Use the same rating and type only. Other components in the torch are non-serviceable.

- Always check the torch lid is fitted properly to prevent internal components becoming exposed to outdoor conditions.
- Do not use abrasive cleaners, clean with damp cloth.
- Use only the charger supplied with the torch. Failure to do so may cause damage.
- When product is not in use, store in room temperature for longer battery life. Ideally charge for 1-2 hours before storing. Recharge every 3-4 months even when not using.
- Do not overcharge. Keep charging time less than 24 hours.
- Ensure battery is charged properly. Charge as soon as possible after significant use.

## WARRANTY

Arlec guarantees this product in accordance with the Australian Consumer Law and all other applicable Australian and New Zealand laws that are unable to be excluded.

Arlec also warrants to the original purchaser of this product ("you") from a retailer with which this document is given that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has been maintained in accordance with the recommendations specified by Arlec, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the

product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

#### **For goods purchased in Australia (only):**

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

#### **For goods purchased in New Zealand (only):**

The Warranty is in addition to, and does not affect, other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that can only be excluded under the New Zealand Consumer Guarantees Act 1993 to the extent you are acquiring the product for a business purpose and it would be fair and reasonable for Arlec to contract out of those guarantees.

# ARLEC

**Arlec Australia Pty. Ltd.** ACN 009 322 105 gives the Warranty for goods purchased from a retailer in Australia by you and **Arlec New Zealand Limited** NZBN 9429030738294 gives the Warranty for goods purchased from a retailer in New Zealand by you (collectively **Arlec**).

Arlec's telephone number, address and email address for purposes of giving the Warranty are:

Telephone Number: (03) 9982-5111 (in Australia)  
0800 003 329 (in New Zealand)

Street Address: Building 3, 31-41 Joseph Street, Blackburn North, Victoria, 3130, Australia

Postal Address: Blackburn North LPO, P.O. Box 1065, Blackburn North, 3130, Australia

Email: [custservice@arlec.com.au](mailto:custservice@arlec.com.au)